


## What is it!

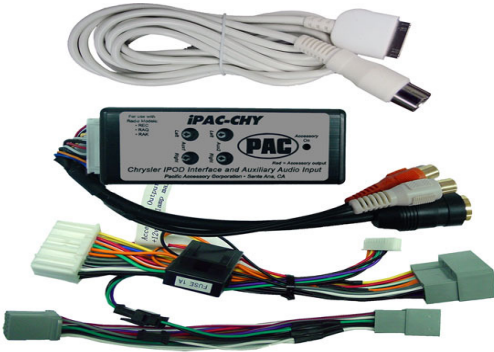

## 26-258 (iPAC-CHY)

The iPAC-CHY is an iPod adapter and AUX input all in one Plug & Play interface. This interface will charge the iPod, and provide R.A.P. (Retained Accessory Power.) Modern cars have a feature call “Retained Accessory Power” where the accessory power stays on with the key turned off until a door is opened.

You also have full control from the iPod itself! The iPAC-CHY doesn't come with a cradle, but what you have is an iPod lead which you can have in the glove box compartment or stored in any other storage bay, like the central armrest storage hold.

**£69.00  
+VAT**

## Compatible Vehicles

2004-2007 **Durango**  
2005-2007 **300, Magnum, Dakota, Charger, Grand Cherokee and Commander**  
2006-2007 **Caliber, Ram**  
2007 **Compass, PT Cruiser, Aspen and Patriot**

## Compatible Head Units (Not VES !)



**REC**



**RAQ**



**RAK**

## Important Notes !

The iPAC-CHY will emulate the VES only! If the vehicle has factory VES, it **MUST** be disconnected. VES does NOT operate in R.A.P. mode. The radio will automatically switch to tuner mode during R.A.P. There is no synchronising text display on any of these radios with this interface. The iPod® click wheel will be available for use with this interface in conjunction with the radios control buttons. On the steering wheel, only the Track-Up and Track-Down buttons will control the iPod.

The iPAC-CHY doesn't come with a cradle, but with an iPod lead which you can have in the glove box compartment or stored in any other storage bay, like the central armrest storage hold.

## RAK AND RAQ RADIO BUTTONS:

	<b>Track Down</b> —This will select the previous track in the selected play list.	<b>RND PTY</b>
	<b>Track Up</b> - This will select the next track in the selected play list.	<b>SCAN</b>
	<b>Seek Down</b> - This button will act the same as the Track Down button if pressed for less than 1 sec. If pressed and held, it will rewind into the selected track at a rapid rate.	
	<b>Seek Up</b> - This button will act the same as the Track Up button if pressed for less than 1 sec. If pressed and held, it will fast forward the selected track.	

## REC RADIO BUTTONS:

	<b>Seek Down</b> - If pressed for less than 1 second the previous track will be selected. If pressed and held, it will rewind into the selected track at a rapid rate.
	<b>Seek Up</b> - If pressed for less than 1 sec, the next track will be selected. If pressed and held, it will fast forward the selected track.
<b>SET/ RND</b>	<b>Next Play list</b> - This will jump into the next available play list and begin playing the first track. There must be a track in the play list in order to enter it.