





E-Mail: [sales@incartec.co.uk](mailto:sales@incartec.co.uk)  
 Website: [www.incartec.co.uk](http://www.incartec.co.uk)

**Steering Control Adapter 29-645**  
 Nissan X Trail(01>) with 2 audio connectors  
 Nissan 350Z , Murano, Navara (<07)

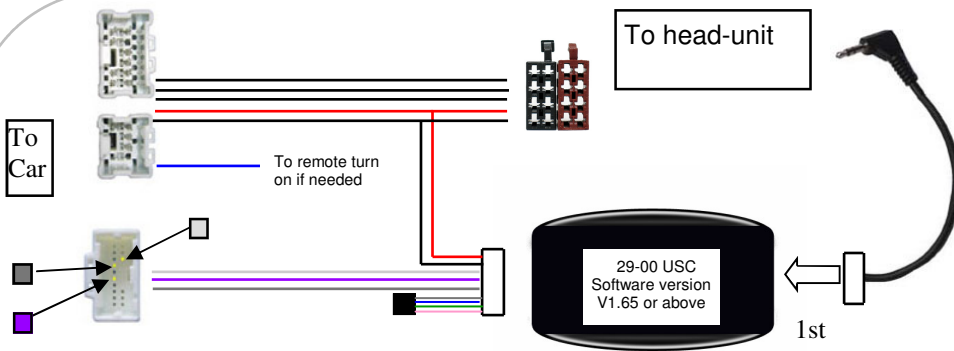

**1-ALWAYS CONNECT THE HEAD-UNIT CABLE ADAPTER 1st before ignition is turned on!**

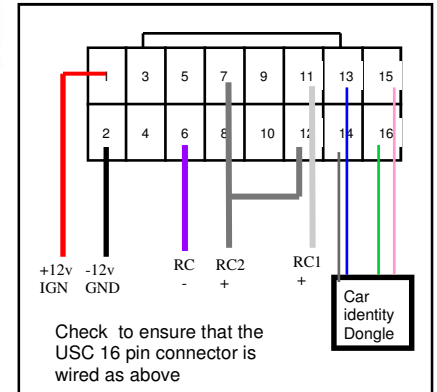

1. Choose a head-unit adapter from the list overleaf and connect it to the USC black box.
2. Turn off the ignition supply to the car!
3. Remove the OEM head-unit and identify the audio connectors and ensure it mates correctly with the connectors supplied with the 29 series cable.
4. Connect the 29 series cable to the car and to the ISO connectors on the new radio.
5. Check that the red wire is a 12V IGNITION source in the car then turn on ignition
6. Test unit before fully fitting radio and trims back.


**If car is amplified connect blue/white wire to remote turn on from new car radio & use item 20-273 Bose adapter**

**If Problems:** Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here




E-Mail: [sales@incartec.co.uk](mailto:sales@incartec.co.uk)  
 Website: [www.incartec.co.uk](http://www.incartec.co.uk)

**Steering Control Adapter 29-645**  
 Nissan X Trail(01>) with 2 audio connectors  
 Nissan 350Z , Murano, Navara (<07)

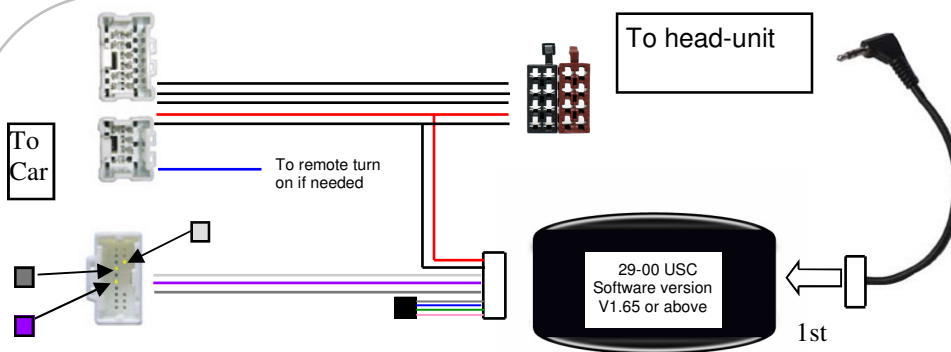

**1-ALWAYS CONNECT THE HEAD-UNIT CABLE ADAPTER 1st before ignition is turned on!**

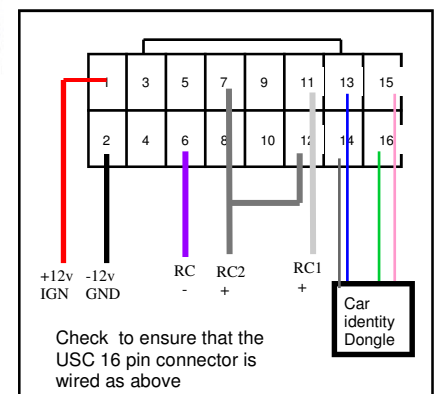


1. Choose a head-unit adapter from the list overleaf and connect it to the USC black box.
2. Turn off the ignition supply to the car!
3. Remove the OEM head-unit and identify the audio connectors and ensure it mates correctly with the connectors supplied with the 29 series cable.
4. Connect the 29 series cable to the car and to the ISO connectors on the new radio.
5. Check that the red wire is a 12V IGNITION source in the car then turn on ignition
6. Test unit before fully fitting radio and trims back.

**If car is amplified connect blue/white wire to remote turn on from new car radio & use item 20-273 Bose adapter**


**If Problems:** Check that correct adapter has been used and links are in the correct place. Always disconnect from the power supply if you change the head-unit adapter lead. Check that Red wire is 12V ignition and not Permanent power. Check that head-unit is earthed and black wire is earth. Check all connections are the same as the wiring diagram shown here

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW


29-001 Alpine

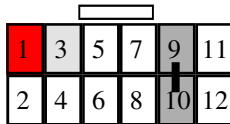


29-002 Blaupunkt

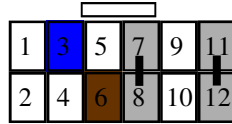


29-003 Clarion

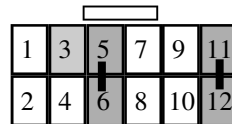


29-004 JVC

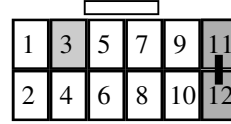


29-005 Kenwood  
Single wire

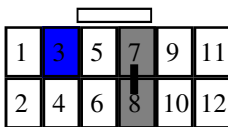


29-005D Kenwood  
4 pin DIN Plug

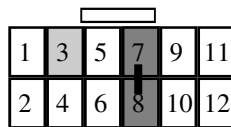


29-006 Panasonic  
Standard CD units

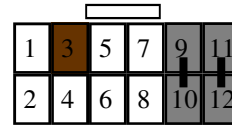


29-006A Panasonic  
AV head-units

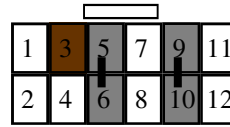


29-009 Siemens  
VDO

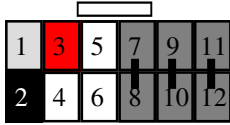


29-008 Sony  
3v & 5v units

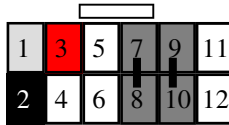

29-011 Zenec

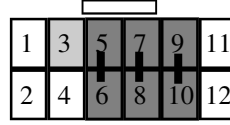


29-020 Pioneer &  
Sony

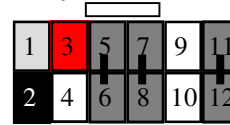


Special external drive  
PCB version

CHOOSE THE CORRECT HEAD-UNIT ADAPTER FROM THOSE BELOW


29-001 Alpine

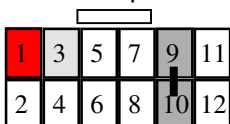


29-002 Blaupunkt

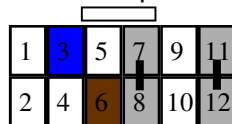


29-003 Clarion

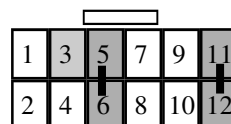


29-004 JVC

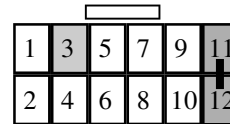


29-005 Kenwood  
Single wire

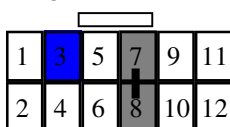


29-005D Kenwood  
4 pin DIN Plug

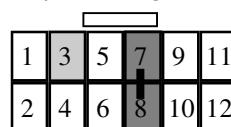


29-006 Panasonic  
Standard CD units

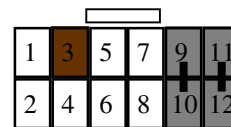


29-006A Panasonic  
AV head-units

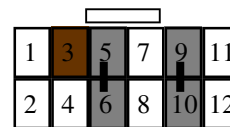


29-009 Siemens  
VDO

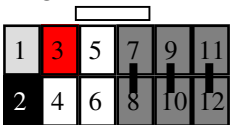


29-008 Sony  
3v & 5v units

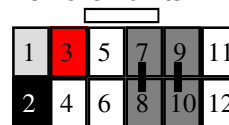

29-011 Zenec

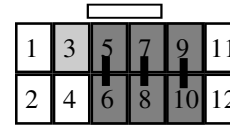

29-020 Pioneer &  
Sony

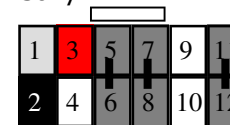

Special external drive  
PCB version