


## CAN IGNITION supply in Quadlock cable to ISO car radio

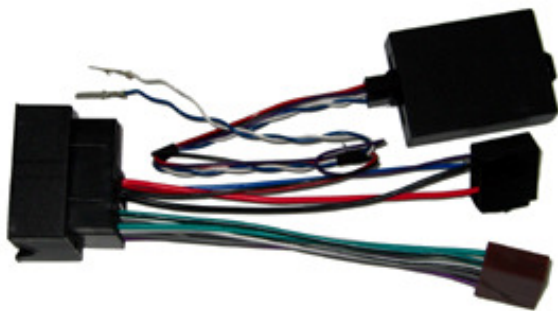


### 25-156-IGN

Gives genuine Key In Ignition supply on European cars with Quadlock connector.

Simply plug in pins into correct CAN Hi and Can low positions. (instructions included)

Audi, BMW, Citroen, Ford, Mercedes, Opel, Seat, Skoda, Vauxhall, VW

## CAN IGNITION & SPEED PULSE supply in Quadlock cable to ISO car radio

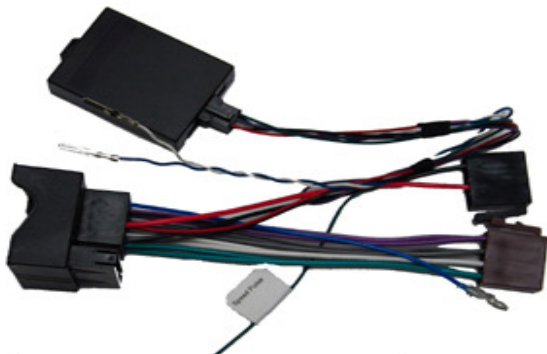


### 25-156-DUO

Gives genuine Key In Ignition & Speed pulse supply on European cars with Quadlock connector.

Simply plug in pins into correct CAN Hi and Can low positions. (instructions included)

Audi, BMW, Citroen, Ford, Mercedes, Opel, Seat, Skoda, Vauxhall, VW

## CAN IGNITION supply in ISO cable to ISO car radio

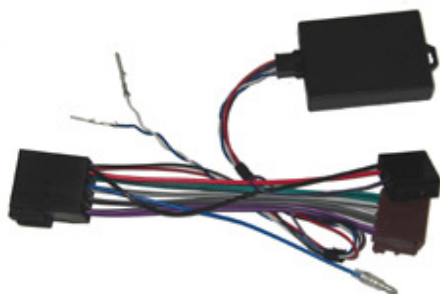


### 25-138-IGN

Gives genuine Key In Ignition & Speed pulse supply on European cars with ISO Can connector.

Simply plug in pins into correct CAN Hi and Can low positions. (instructions included)

Alfa, Fiat, Mercedes A, Vito,

## CAN IGNITION & SPEED PULSE supply in ISO cable to ISO car radio

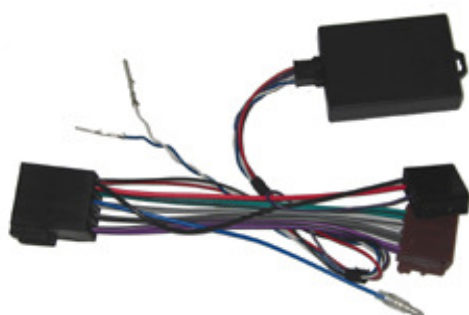

### 25-138-DUO

Gives genuine Key In Ignition & Speed pulse supply on European cars with ISO Can connector.

Simply plug in pins into correct CAN Hi and Can low positions. (instructions included)

Alfa, Fiat, Mercedes A, Vito,

## CAN IGNITION & SPEED PULSE Universal Boxes



### 25-501

Gives CAN Key In Ignition

Universal

Connect to CAN hi & CAN low



### 25-503

Gives genuine Key In Ignition & Speed pulse.

Universal

Connect to CAN hi & CAN low